




Cordex Controller Power Limiting

Summary

This procedure describes the how to change the Power Limit for the rectifiers.

Procedure A - Laptop


1. Log onto the Controller
2. Go to [Rectifiers>Configure Rectifiers>Power Limit] and change the % value

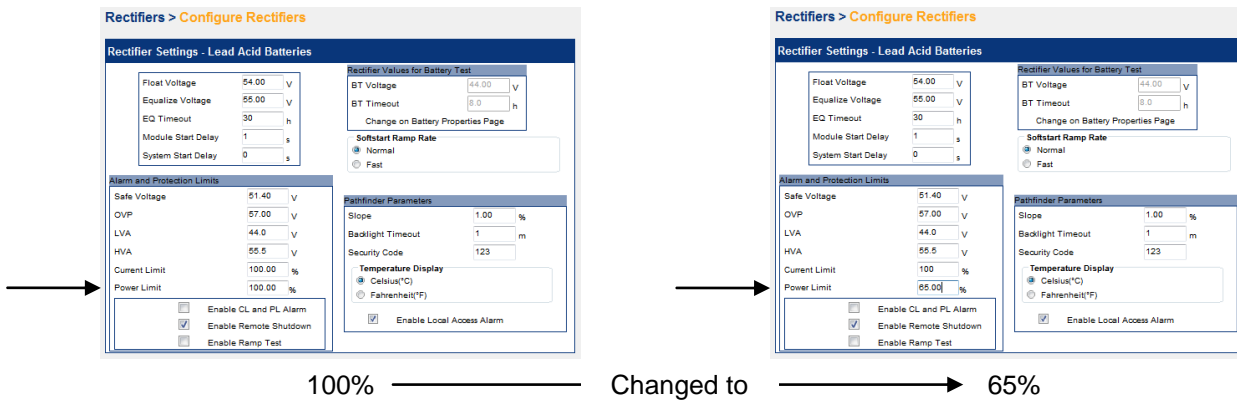

3. Then Submit Changes

Procedure B – Controller Screen

1. Log onto the Controller
2. Go to [Rectifiers] then [Configure Rectifiers] and move to and tap [Power Limit] then change the % value

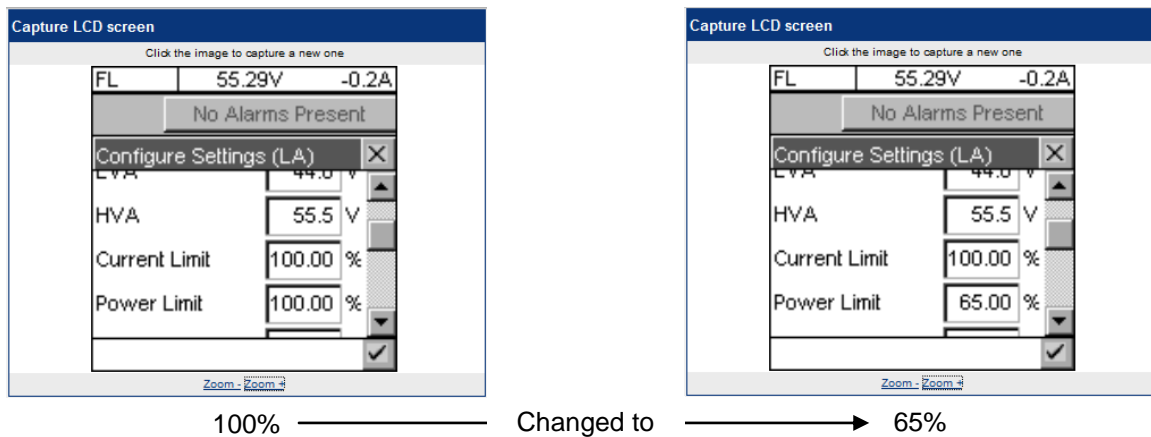

3. Then tap the right check marks and [Option]>[Save]