




Troubleshooting of Cordex/Pathfinder Rectifiers

When you encounter a rectifier in a permanent minor (flashing alarm indicator) or major (steady lit indicator) alarm state. Follow the procedure below to obtain additional information related to the cause of the alarm.

1. Tap on the rectifiers information area to the left of the voltage and current readings on the controller front panel.
2. Tap on the Rectifier Report button on the next screen.
3. Identify the rectifier serial number(s) with a number in the alarm column with the bell icon.
4. Tap on the rectifier serial number row that has the alarm count indicator, and then tap on View Details.
5. Verify that the drop-down list shows Rectifier Alarms and write down the name of the alarms that are displayed.
6. Tap the checkmark button until you reach the normal status screen.

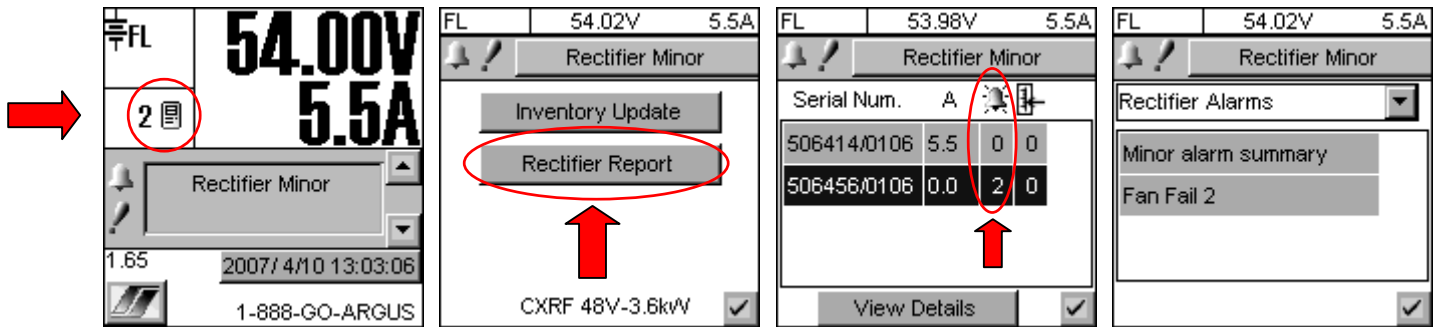

When you encounter a rectifier with an intermittent minor or major alarm state. Follow the procedure below to obtain additional information related to the cause of the alarm.

1. Connect to the controller using a null-modem or crossover cable and open Internet Explorer to the appropriate IP address -- 10.10.10.201 (crossover) and 10.10.10.203 (null-modem). See CXC Software Manual – Chapter 8: Remote Communications.
2. Click on the Logs & Files menu and then click on the Event Log button.
3. Save the page, by clicking on File > Save As... and selecting either: Web Archive, single file (*.mht), OR XML Files (*.xml) for the file type.

- Email the saved MHT or XML file to support@argus.ca and include the serial number of the failed rectifier module in the body of the message.

Event Log in version 1.65

Date & Time	Signal Name	Event
2007/04/10 13:06:20.195	Login Username	
2007/04/10 13:06:20.195	Login Ethernet	10.10.10.202
2007/04/10 13:02:41.880	Relay 4 (K4)	De-Energized
2007/04/10 13:02:41.865	Rectifier Minor	Active
2007/04/10 13:02:41.855	Rectifier Minor	N506456/0106
2007/04/10 13:02:39.105	Login Username	
2007/04/10 13:02:39.105	Login Ethernet	10.10.10.202

Event Log in version 1.91

Date and Time	Signal Name	Event	Log Records	Data 1	Data 2
2007/04/10 13:20:15.750	Login Ethernet	10.10.10.202	1		
2007/04/10 13:18:58.240	Relay 4 (K4)	De-Energized	1		
2007/04/10 13:18:55.635	Fan Fail Alarm	Active	1		
2007/04/10 13:18:55.615	Rectifier Minor	Active	1		
2007/04/10 13:18:55.610	Fan Fail Alarm	Active	1	N506456/0106	
2007/04/10 13:18:55.600	Rectifier Minor	Active	1	N506456/0106	Fan Fail 2
2007/04/10 13:18:52.100	Relay 7 (K7)	Energized	1		
2007/04/10 13:18:52.095		SNMP agent started	1		
2007/04/10 13:18:52.095	Relay 4 (K4)	Energized	1		

Rectifier Removal and Replacement

When you remove a rectifier from the system, you need to perform an inventory update to delete the serial number of the rectifier module that was taken out.

- Tap on the rectifiers information area to the left of the voltage and current readings on the controller front panel.
- Tap on the Inventory Update button on the next screen.

If you replace the rectifier with another module, the controller will perform an inventory update automatically, upon detection of the new rectifier module.

When you submit the RMA request to Argus Technologies, please provide the following information:

- Serial number
- Model Number
- Fault Description
- Ship to: address
- Bill to: address
- Return courier account number